

WJ FRONT INSTALL

DRY FIT BEFORE PAINT OR POWDER COAT



PULL PLASTIC FRONT BUMPER OFF



FIG 1

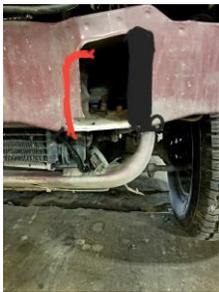


FIG 2

WITH A CUT OFF WHEEL, CUT TO INSIDE OF FRAME



FIG 3